 


ASSEMBLY INSTRUCTIONS

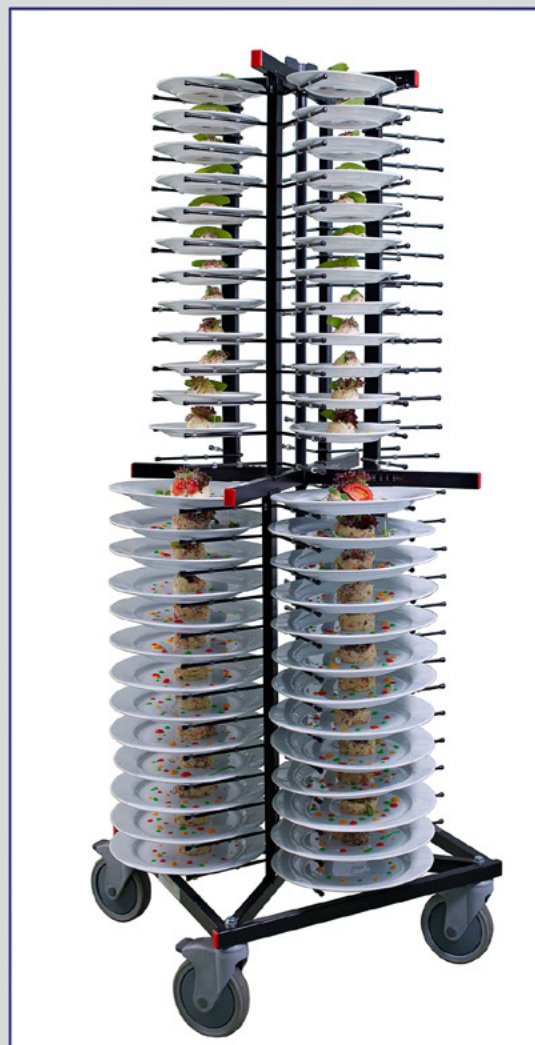

JACKSTACK®, THE WORLD'S FASTEST AND MOST VERSATILE FOOD STORAGE AND SERVING SYSTEM

ASSEMBLY INSTRUCTIONS for JS104, JS088, JS072 and JS104/9" (A-K) for JS052F and JS036F (A-F)

 
 
 
 
Suggest two persons when assembling unit.

Box contents :

1. A wheel base with four swiveling wheels of which two with brakes.
2. Two round center columns.
3. Eight uprights with plateholders (arms).
4. One big middle crossbar.
5. One small upper crossbar.
6. One male and one female wingnut.
7. Spare parts.

ASSEMBLY :

- A. Take wheelbase and put brakes on the two wheels so it will not move during assembling.
 - B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
 - C. Lay big crossbar with "JACKSTACK®" marking on the male side of center column.
 - D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
 - E. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
 - F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
 - G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
 - H. Slide four uprights with upmarking up between upper and middle crossbar.
 - I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
 - J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
 - K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.
- The only correct setting is when the plates rest on all four plastic o-rings.
 - For changing to other plate dimensions, unloose the nearest wingnut to the section you want to change, adjust uprights accordingly and tighten down the wingnut again.

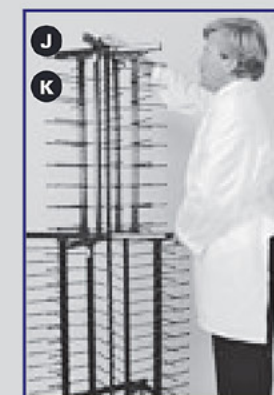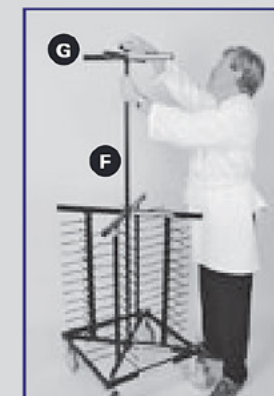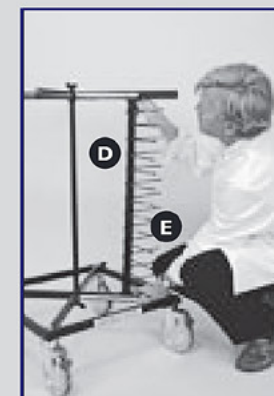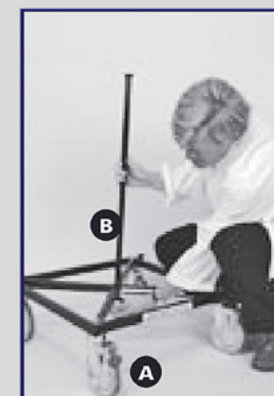

FSM (FOOD SERVICE MACHINERY PTY. LTD.)

HEAD OFFICE:

21-23 Agosta Drive, Laverton North,
Vic. 3026 Australia
T: +61 3 9368 2300 F: +61 3 9369 3800
E: sales@fsm-pl.com.au W: www.fsm-pl.com.au

SYDNEY OFFICE:

Unit 15, 7-9 Progress Circuit,
Prestons, NSW 2170
T: +61 2 9608 8620 F: +61 2 9607 9370
E: sales@fsm-pl.com.au W: www.fsm-pl.com.au

QUEENSLAND OFFICE:

4/40 Rivergate Place,
Murarie, QLD 4172
T: +61 7 3390 4185 F: +61 7 3393 9508
E: sales@fsm-pl.com.au W: www.fsm-pl.com.au

PERTH:

T: 0413 893 311
E: sales@fsm-pl.com.au
W: www.fsm-pl.com.au